


# SHAD

## YAMAHA TRACER 900 '21 SIDE BAG HOLDER YOTR91SE

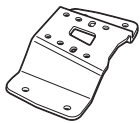

1 262791 x1



2 304052 x2  
M6 x 20  
Din 7380



3 303000 x12  
Ø6



4 302021 x6  
M6



5 304038 x2  
M6 x 22  
Din 912




6 262790 x2



7 262789 x1



8 304037 x2  
M6 x 35  
Din 912

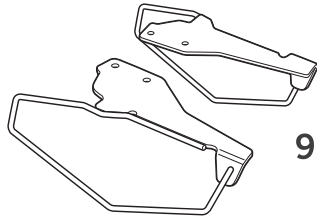

9 262796 x1 →  
262797 x1 ←



10 304053 x4  
M8 x 30  
Din 7380



11 303045 x8  
Ø8



12 302024 x4  
M8

### ! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

